
Echo1612, Inc.

Nanobeam Reset Guide

Aug 24st, 2017



Re “pair” your sideline Nanobeam setup.

Connect your EdgeRouter to power

Plug in Nanobeam 192.168.1.161 to port ETH2.


Plug in Nanobeam 192.168.1.162 to port ETH3.

Plug in echo 5 Booth Mesh to port ETH4.

Wait for all devices to power up.


On your iPad connect to wifi “echo 5 Booth”.

Open Safari and enter <http://192.168.1.162>

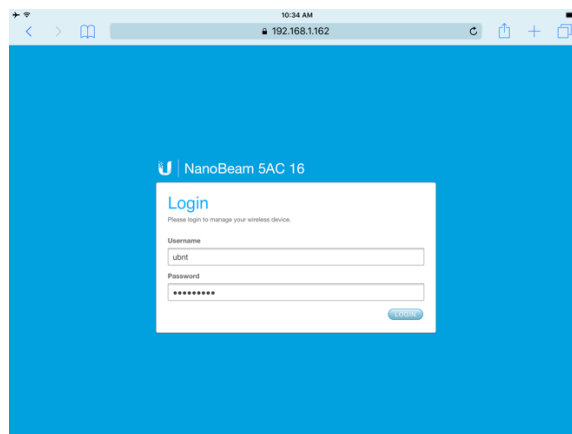


Login **ubnt**
Password **touchdown**

If the connection is not established it will look like this.

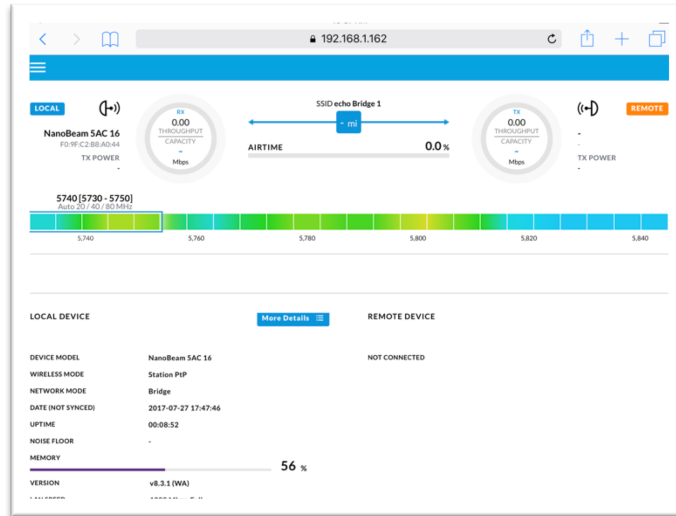


Tap the = button in the top left.
Select “Wireless”


Then on the right of the page next to **SSID** tap **Select**

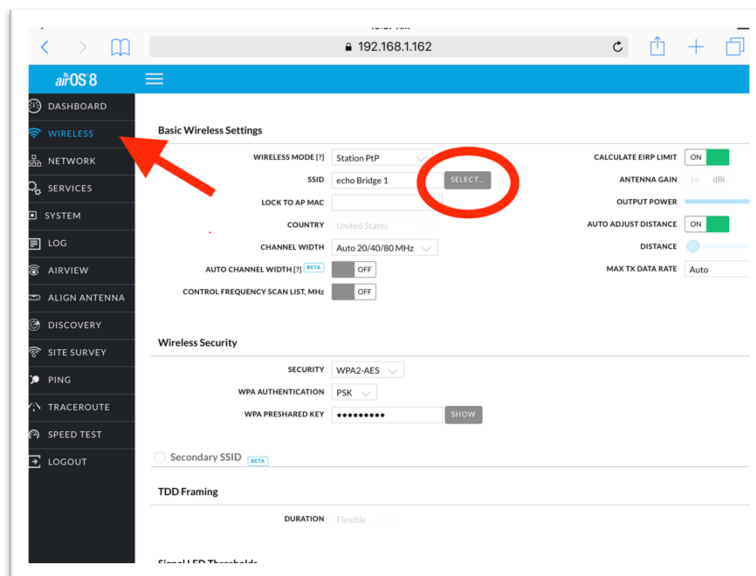


Tap the radio button to the left of **echo Bridge 1** and tap **LOCK TO AP**.

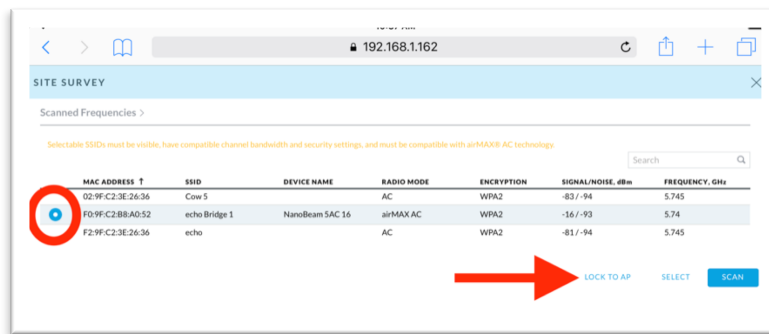


Now scroll down and tap **Save Changes**

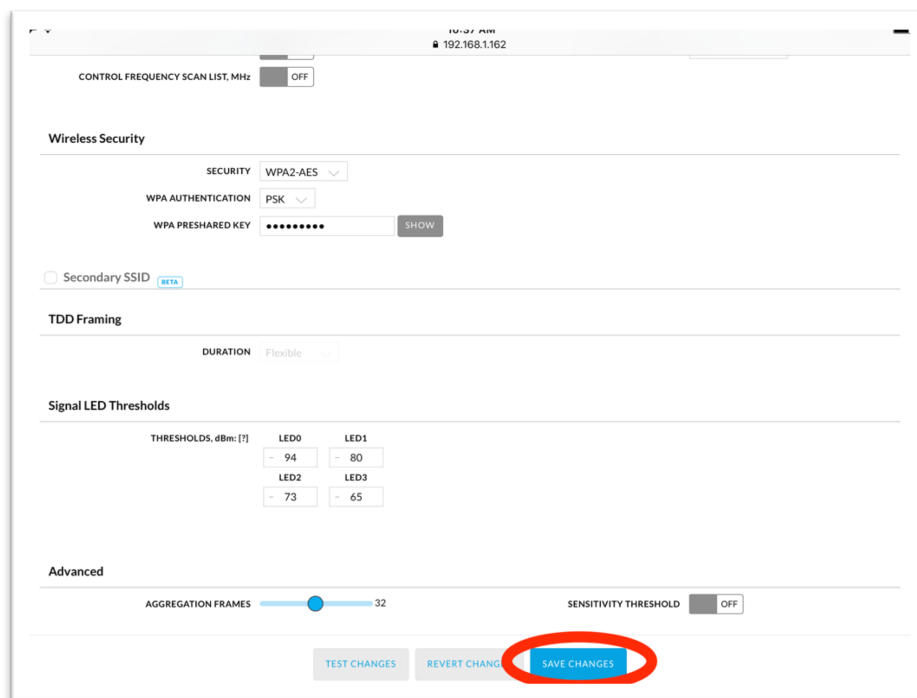

Go back to the Dashboard, tap the = Menu button and select Dashboard.

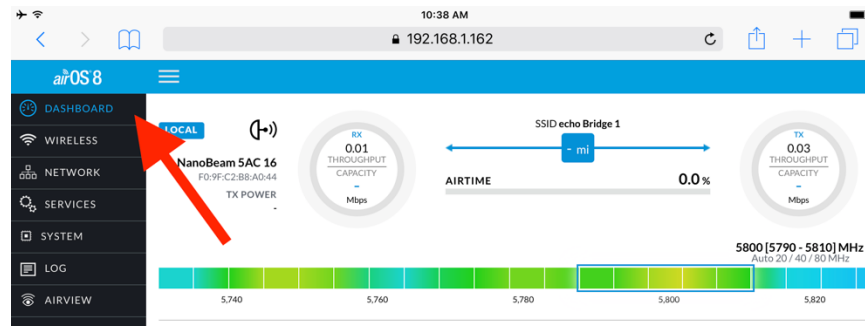

If the connection is established, blue lights will appear on the Nanobeams and the throughput will increase.

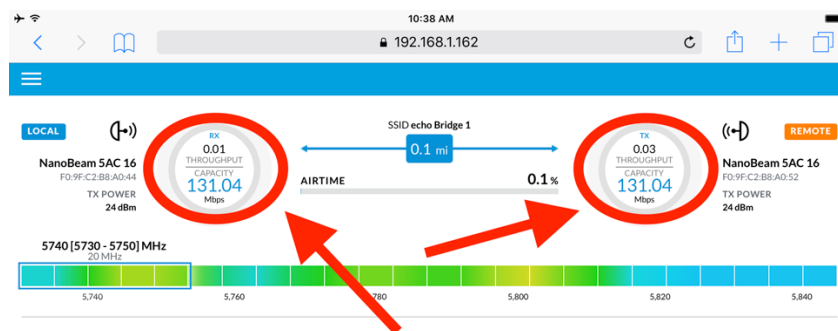

You can now unplug the Nanobeams and move 162 to the sideline.

Echo1612, Inc. Technical Support

Technical Support Number: (405) 896-6767

Technical Support Email: support@echo1612.com

For news and important system updates please follow us on Facebook, Twitter or Instagram!